

Cherokee CBS 500 Modification

Channel Modification:

1. Remove the top cover.
2. Look at the back of the faceplate circuit board and there is a jumper connector, like the type in your computer
3. Move this jumper off of the pins that it is on now and put them on the other 2 pins.
4. Replace the top cover.

Once the channel modification has been done press channel 9-19 button and then turn on the radio. After this mod use the number 1 button to select different bands of 40 channels. (Coverage from 25.165-29.665Mhz)