

Cherokee CM-5 Modification

Channel Modification:

1. Remove the bottom cover, the one with the speaker holes.
2. Look toward the front faceplate circuit board and locate the large loop of wire.
 - * Normally green in color. Original Version.
 - * New Version, Locate the jumper pins on the rear of the faceplate circuit board.
- Remove Solder Bridge.
3. Cut or remove this wire.
4. Replace bottom cover.

Once the channel modification has been done the CH9 button becomes, the band select button. The "Dual Watch" button will still work between bands.

* (Set dual watch channel 17 band D, while listening to band C channel 19.)