

TEAM PT-3508 (3)




PMR-446
&
optional
programmierbares
Amateurfunkgerät
430 - 440 MHz

*PMR-446
&
optional
programmable
HAM-Radio
430 - 440 MHz*

**Bedienungsanleitung
Manual**

Displays and Controls	page
	2
Set-Up of the TEAM PT-3508 (3)	21
Installing and Removing the Rechargeable Battery Pack	21
Installing and Removing the Belt Clip	21
Installing and Removing the Wrist Loop	21
Operation of the TEAM PT-3508 (3) with the Basic Functions	22
1) Turning ON/OFF Your Radio	22
2) Set Up the Volume	22
3) Channel Selection	22
4) Transmission	22
5) Reception	22 - 23
6) Jacks for External Ear- / Microphone	23
7) Charging the Rechargeable Battery Pack	23
8) Low Power Alert Function	23
9) Energy Saving Function	24
10) Scan Function	24
Muting Functions of the TEAM PT-3508 (3)	25
1) General	25
2) Description of the Procedures	25 - 26
3) Remarks about the Mute Functions	26
4) Programming the Different Mute Control Functions	26
5) Monitor Key Functions	26
6) Transmitting with the Different Mute Control Functions	27
7) Direct Transmission of DTMF Tones	27
8) Storage of DTMF Strings of Characters	27
9) Replay a Stored DTMF String Without Transmitting It	27
10) Transmission of a Stored DTMF String	28
11) Deletion of a Stored DTMF String of Characters	28
Additional Functions and Settings of the TEAM PT-3508 (3)	28
1) Setup of the Squelch Threshold	28
2) Temporary Change of the CTCSS Setting	28
3) Switch of a Channel's Transmission and Reception Settings	29
4) Key Lock Function	29
5) Display Background Light Setting	29
6) Time-Out Timer (TOT)	30
7) Transmission Lock on Busy Channels	30
8) Transmit Power Switch	30
9) VOX-Function	31
General	31
1) Security	31
2) Service	31
3) Declaration of Conformity	31
4) Programmed Channels	32
5) Programmed Functions	33
6) Specifications	33
7) CTCSS-Tones and DQT-Codes	34

Unpack the PT-3508 (3) carefully. Make sure that none of the following items is missing. Should any item be defective or missing, please contact your dealer immediately.

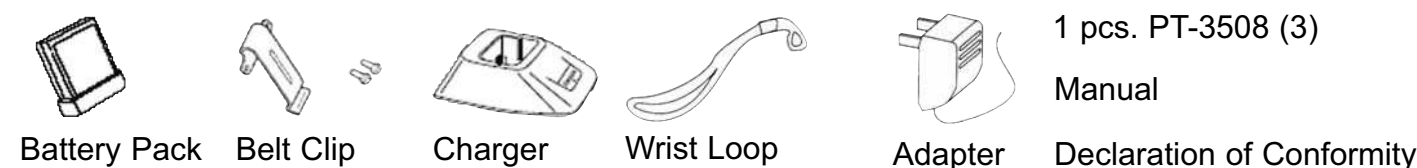

PT3508 (3) is a PMR handheld transceiver that can be programmed via the optional software T-UP2 into a combined PMR-/ HAM-Radio. By default, PT3208 (3) contains only 8 PMR channels. The indicated channel numbers in the display refer to the according PMR channels that are listed in the chapter *General*, paragraph 7) *Specifications* in the PMR Channel Table.

The transmitting power is set to 500 mW according to the European rules and regulations for PMR handheld transceivers.

If you want to use the 70 cm frequency band radio channels, a HAM license is required. For further details about this license and its requirements, contact the government agency for communication in your country that regulates these issues.

If you only use the default PMR channels, no license is required in most of the european countries.

Installing and Removing the Rechargeable Battery Pack

Installing
Carefully insert the rechargeable battery pack into the opening at the base of the PT-3508 (3). Turn the rechargeable battery pack in such a way that the "Caution" label on the rechargeable battery pack will be at the front and the charging contacts at the rear of the PT-3508 (3). Snap the rechargeable battery pack (15) into place by pushing until you hear a click. The unit is now ready for use.

Removing
To remove the rechargeable battery pack, turn the rear of the unit toward you. Push the ribbed latch and, at the same time, pull the rechargeable battery pack out of the PT-3508 (3).

Installing and Removing the Belt Clip

Attaching
The belt clip is to be attached at the rear of the PT-3508 (3). Remove the two screws that are located above the label. Position the belt clip with the base pointing to the bottom of the handheld transceiver and the upper part with the two holes touching the unit's back part where the screws will be positioned and fasten the belt clip with the two screws.

Detaching
Loosen the screws, remove the belt clip and put the screws back in position.

Installing and Removing the Wrist Loop
The metal ring for the wrist loop is located above the microphone / speaker jacks [SP]/[MIC] (13) on the right side of the PT-3508 (3).

Attaching
Put the thin part of the wrist loop through the metal ring. Through the loop of the thin part, pull the wide part of the wrist loop and pull until the knot is tight. Refer to the image.

Detaching
Loosen the knot of the wrist loop at the metal ring and pull the wide part of the wrist loop out of the loop. Finally, remove the wrist band from the metal ring.

Operation of the PT-3508 (3) with the Basic Functions

1) Turning ON/OFF Your Radio

To turn on the PT-3508 (3), turn the rotary volume switch (3) clockwise until it clicks. A sound signal can be heard through the speaker (14), the display (2) emits blue light and all symbols appear. After the completion of this initial test, PT-3508 (3) is in receiving mode. The display reads **CH X**, where **X** represents the selected channel.

To shut off the handheld transceiver, turn the rotary volume switch (3) counterclockwise until it clicks. All symbols in the display will disappear.

2) Set Up the Volume

To set the volume if no signal is received, push the monitor key [MONI] (7) to hear a noise through the speaker. Now the volume can be adjusted. Turn the volume switch (3) clockwise to increase the volume or counterclockwise to decrease it.

3) Channel Selection

PT-3508 (3) can store a maximum of 50 channels. By default, the PT-3508 (3) has 8 programmed PMR channels available. If you have a valid HAM license, you are permitted to program additional channels with the software T-UP2.

To change a channel, turn the rotary channel selector switch (5). According to your individual setup, the frequencies for transmission and reception will be displayed. The channel numbers increase in a clockwise direction and decrease in the counterclockwise direction.

Note:

If a channel position is not set, it will be skipped when turning the channel selector switch (5). In that case, you will switch to a channel that is two or three steps away, although turning the channel selector for just one step.

4) Transmission

Pushing the PTT key [PTT] (6) activates the transmitter.

Never transmit when the antenna (1) is detached.

According to the code of conduct, one should not transmit when incoming signals are received. Only if no sound is audible through the speaker (14), and the LED (4) is off, the channel is available.

If a muting function is activated for a channel, all incoming signals that are not encoded or that use a different code will not be audible. Only the green light of the LED (4) indicates that a station on the selected channel is transmitting. To hear the signal, push the monitor key [MONI] (7).

For two stations to communicate with each other, both must use the same channel. The same applies to the muting functions. For further information refer to paragraph 2 of the chapter "Muting Functions of the PT-3508 (3)".

If all requirements are met it can be transmitted. Keep the PTT key [PTT] (6) pushed as long as you are talking. The LED (4) will emit red light and the rotary channel selector is disabled during transmission. The Bar Indicator displays the signal strength. Keep the PT-3508 (3) in an upright position at a distance of approximately 5 cm from your mouth, and talk loudly and clearly. When finished talking, release the PTT key [PTT] (6). The unit will then switch back to receiving mode.

5) Reception

Turned on, the PT-3508 (3) is always in receiving mode, unless it transmits.

PT-3508 (3) disposes of a noise suppression circuit (squelch). If there is no incoming signal on the channel, a disturbing noise is audible through the speaker (14). To suppress this noise, the squelch mutes the speaker until a signal is received. Then, the incoming signal disables the squelch, and the signal passes through the speaker (14), while at the same time the LED (4) emits green light. The signal strength is indicated via the Bar Indicator

The squelch level can be adjusted, i.e. the minimum strength of an incoming signal to disable the squelch can be set manually at the PT-3508 (3) or remotely via the software T-UP2. Beside the squelch, there are other muting functions available. More information about these features can be found in paragraph 2 of the chapter *Muting Functions of the PT-3508 (3)*.

To hear weak signals on the selected channel, it is necessary to disable all muting functions by pressing the monitor key [MONI] (7). In a normal setup, the squelch function is disabled when pressing the monitor key [MONI] (7). In this case the LED (4) emits green light and the symbol — can be seen in the display. As long as the monitor key is pressed, a noise is audible.

Note:

The monitor key function can be altered with the software T-UP2. Please refer to paragraph 5 of the chapter *Muting Functions of the PT-3508 (3)*.

6) Jack for External Ear- / Microphone



On the right side of the PT-3508 (3), two jacks Ø 2,5/3,5 mm [SPK]/[MIC] (13) are located under a rubber cover. A combined ear- / microphone with PTT (Push-To-Talk) function or an other headset can be connected. As indicated on the rubber cover, the upper jack is for the speaker and the lower jack for the microphone. The internal speaker and microphone will be turned off when connecting a headset through those jacks.

To avoid damage on the connectors and the jacks through pulling forces, attach the cable to the metal ring above the jacks via a cable fastener.

7) Charging the Rechargeable Battery Pack

Insert the DC connector of the adapter into the jack on the rear of the charger, before connecting the adapter with a wall outlet (230 V / 50 Hz). Now position the PT-3508 (3) with the attached battery pack or just the battery pack by itself into the charging mould. The rechargeable battery pack is positioned correctly when the charging contacts show to the rear of the charger.

The rechargeable battery pack needs to be charged before using it the first time.

The two-color LED on the charging mould indicates the charging status. If the LED emits red light, charging is in process - CHARGING (RED). Once charging is completed, the charging current is reduced, and the LED emits green light - (GRN) COMPLETE. It takes approximately 6 hours to fully charge the rechargeable battery pack. Once the LED starts emitting green light the unit can be charged for another 2 hours maximum to use the entire capacity of the rechargeable battery pack. Nevertheless, you should not exceed this time limit to not overcharge the rechargeable battery pack, which could reduce the capacity and shorten the life endurance of the rechargeable battery pack. The charger always remains for 6 hours in the charging mode before reducing the charging current, regardless of the charging status of the accumulator. Therefore, do not charge incompletely discharged battery packs since this also can cause overcharging.

Never try to charge alkaline batteries or other rechargeable battery packs than the one supplied with the PT-3508 (3).

8) Low Power Alert Function

The PT-3508 (3) has a battery control function that prevents the complete discharge of the rechargeable battery pack. When the charge level drops below a certain value in receiving mode the PT-3508 (3) turns off automatically. To alert you about the low power status of the rechargeable battery pack, the LED (4) blinks orange and a warning beep can be heard. In this low power status, the transmitter is disabled.

The Low Power Alert function can be disabled with the software T-UP2.

The charge level can be checked at any time by pressing the PTT key. A bar indicator at the bottom of the display shows the charge level of the rechargeable battery pack.

9) Energy Saving Function

When the Energy Saving Function is activated, the unit will switch to standby mode if no signal has been sent or received, and no control has been used for a certain period. In standby mode the power consumption is lowered. If the PT-3508 (3) is not in use for a longer period, it is recommended to turn the unit off.

This function can be set with the software T-UP2.

10) Scan Function

The scan function allows searching some or all available channels for incoming signals until a transmitting station has been found. The list of channels to be scanned has to contain at least two channels for the scan function to be enabled. A channel that is on the list of channels to be scanned is indicated by the capital letter **A** on the left side of the display.

Add a channel to the list of scanned channels:

1. Press the FUNC key (9), and the capital letter **F** has to show on the left side of the display.
2. Press the SCAN key (10), and the capital letter **A** has to show on the left side of the display.

To remove a channel of the list, precede in the same order as described above. This time, the letter **A** will disappear.

To scan the selected channels press the scan key [SCAN] (10). All symbols will disappear and the wording **SCAn** will show on the display. Now all selected channels will be scanned in ascending order. As soon as an occupied channel is found, the scanning stops and the display reads **CH. X**, where **X** stands for the channel number. The blinking dot behind the letters **CH** indicates that the scan function is active. Meanwhile the LED (4) emits green light. If for three seconds no incoming signal is received, the scan function proceeds and the display reads **SCAn** again until another busy channel is found.

Besides the squelch function, there are other muting functions available. The scan function stops only on those channels where the incoming signal uses the same muting function. If a channel uses a DTMF code (Dual-Tone-Multi-Frequency, also known as touch-tone), the scanner stops if an incoming signal is received but the squelch function will only open the speaker once the correct DTMF code has been verified. For more information, contact your dealer and refer to paragraph 2 of the chapter *Muting Function of the PT-3508 (3)*.

To stop scanning press any key except the monitor key [MONI] (7). When disabling the scan function while scanning is in process, the unit will return to the channel where scanning was started. When you deactivate the scan function, while the scanner stops on a channel, the unit will remain on this channel after the scan function has been turned off.

It is not possible to transmit while the scan function is enabled.

Muting Functions of the TEAM PT-3508 (3)

1) General

Several functions available allow suppressing incoming signals of unwanted stations that transmit on the same channel. Only those filtered incoming signals are audible. Two procedures, CTCSS and DQT, add a permanent coding to the sent signal. Two other procedures, Code-Squelch and Selective Calling, send a code followed by the message. These muting functions can be programmed with the optional software T-UP2.

2) Description of the Procedures

a) CTCSS (Continuous Tone Coded Squelch System)

In the CTCSS, the transmitter adds an inaudible tone to the signal that is recognized by the CTCSS detection decision circuit of the receiver, and, consequently, will disable the CTCSS muting function, so the signal is audible.

When receiving signals that use no or a different CTCSS code, the signal is not audible but the LED (4) emits green light to indicate that the channel is occupied. If you are using CTCSS, your dealer can set one of 39 different CTCSS tones in the range of 67 Hz to 250 Hz.

b) DQT

The DQT procedure constantly repeats a specific order of inaudible digital impulses that are added to the signal. When the receiver's DQT detection decision circuit recognizes the identical DQT code, the muting function is disabled and the signal is audible. When receiving signals with no or another DQT code, no signal is audible but the LED (4) emits green light to indicate that the channel is occupied. If you are using DQT encoding, your dealer can set one out of 166 different DQT codes for each channel you are using.

c) Code-Squelch Procedure

In the Code-Squelch procedure, the transmitter sends a code that is composed of 3 - 10 short DTMF tones that will precede the message. If the receiver's Code-Squelch detection decision circuit verifies the code, the message will be audible. When receiving signals that use no code or another Code-Squelch code, only the LED (4) will emit green light to indicate that the channel is occupied.

After the reception and verification of the identical code, the Code-Squelch muting function is disabled, which is indicated by an acoustic signal. It will be reactivated after an adjustable period, when no signal is received. To reactivate the Code-Squelch muting function immediately, press the monitor key [MONI] (7) shortly.

Pushing the PTT key disables the Code-Squelch muting function. During this time the LED (4) blinks orange and, in the display a hyphen shows behind the letters **CH**.

If group calling has been set up, one or more of the DTMF doubled tones of the 3 - 10 tone combination can be replaced by a special DTMF double tone, the group tone. This way, several receivers that use a similar Code-Squelch coding, which varies only at one identical position, can be called simultaneously.

If the 3 - 10 DTMF double tone combination contains a group tone, the Code-Squelch detection decision circuit recognizes a group call. The acoustic signals upon recognition of a group calling and a single call vary.

In addition, your dealer can set up an automatic return call that will inform the transmitting station that the call had been received. This feature is not available for the group calling.

d) Selective Calling

The selective calling procedure sends 4 DTMF double tones preceding the message. This code needs to be verified by the receiver's selective calling detection decision circuit, in order to disable the muting function for the message to be audible. The message, that needs to be sent immediately after the 4 DTMF tones, can contain up to 5 symbols where each symbol corresponds to one DTMF double tone.

Upon reception of a station, that uses no or a different selective calling code, no signal is audible. Only the LED Indicator (4) will emit a green light to indicate a busy channel.

Only one code combination of four short DTMF double tones to be recognized by the selective calling detection decision circuit can be programmed. There is only one selective calling code available for all channels. After reception and verification of the code all requirements are met to disable the mute control for the message to be audible. The message must be sent immediately after the code.

Reception of the verified code and the message will be confirmed three seconds later by an acoustic signal. The 1 – 5 symbols of the message are displayed from left to right in the display part **000000**. In addition, the letter **C** is shown in the digit area **00**. When pressing any key, the message will disappear and the channel number will be displayed with a hyphen after the letters **CH-**. If no message is received after verification of the code, **nOdAtA** (no data) will be displayed in the display part **000000**. At the same time, the selective calling mute control is disabled. This function is reactivated automatically after no signal has been received for a period of time that can be set with the software T-UP2. To reactivate the mute control immediately, press the monitor key [MONI] (7). To disable the mute control, press the PTT key [PTT] (6). When the selective calling mute control is disabled, the LED blinks orange.

If the group calling function has been set up, one or more of the first three DTMF double tones in the 4-tone code can be replaced by a special DTMF double tone, the group calling tone. With the group calling function, numerous receivers can be called whose DTMF codes only vary at the points where group calling tones are used. If a group calling tone has been used, the receiver's selective calling detection decision circuit will recognize a group call. The acoustic confirmation signal of a selective group call differs from a single selective call. The letters **GP** will be displayed in the digit area **000000**.

With the software T-UP2, an automatic return call can be set up that will inform the transmitter about the receipt of the message. This function is not available with group calling.

3) Remarks about the Mute Functions

All the above-mentioned procedures serve the purpose of filtering out unwanted messages. They do not protect encoded messages from being listened to by other stations. All receivers that do not have one of the mute control functions available will receive those encoded signals regardless.

4) Programming the Different Mute Control Functions

The mute control functions of the PT-3508 (3) can only be programmed via the software T-UP2. Each channel can be set individually. It is even possible to assign different mute functions to the receiving and transmitting part of a channel.

The mute control functions Code Squelch and Selective Calling can only be used in reception mode, whereas CTCSS and DQT are available for reception and transmission. Code Squelch and Selective Calling are not simultaneously available. You need to decide which one of the two functions you want to use with your PT-3508 (3). CTCSS and DQT are both available and can be concurrently used with one channel.

The list of the programmed channels can be displayed through the optional software T-UP2.

5) Monitor Key Functions

There are two available settings for the monitor key. The monitor key [MONI] (7) either disables the squelch and the mute control functions CTCSS, DQT and DTMF, or only the CTCSS-, DQT- or DTMF-muting functions but not the squelch.

6) Transmitting with the different Mute Control Functions

The operation of the PT-3508 (3) will not change when using the mute control functions CTCSS or DQT. When using the Code-Squelch or the Selective Calling functions, the DTMF code needs to be entered prior to transmitting the message. The code is entered with the DTMF key pad (12). If required, the right column of letters (A – D) can be disabled with the software T-UP2. Furthermore, it is possible to substitute the letter D with a pause, which length can be set.

7) Direct Transmission of DTMF Tones

a) Immediate Transmission

The following procedure to transmit any number of DTMF double tone characters directly, is the only possible procedure unless your dealer programmed the PTT key [PTT] (6) in a special way.

Push the PTT key [PTT] (6), while you enter the characters through the DTMF key pad (12). During this time, the LED emits red light and the channel selector is disabled. In the display, the bar indicator displays the signal strength and the actual channel is shown. The transmitted DTMF tones are audible. While transmitting DTMF tones the microphone is deactivated.

b) Transmission of Temporarily Saved Data

With the software T-UP2 you can enable this second method, which allows sending a maximum of 16 characters. This *Save & Send* option allows you to store your message into a temporary memory before you send it. The string of characters is entered via the DTMF key pad and shown in the display. The last number always stays to the right. Since the display only has 6 digits, the rest will disappear from the display but still be sent. To send the stored message, push the dial key [DIAL] (8). The LED emits red light, while the stored DTMF tones can be heard in the speaker as they are transmitted. At the same time, the characters are displayed in the order as they were entered. Once the transmission is completed, the actual channel shows in the display.

8) Storage of DTMF Strings of Characters

The PT-3508 (3) has nine memory banks available. Each memory bank can store a maximum of 16 characters. Some strings might already be programmed, that can easily be edited.

Procedure to store a string of characters:

1. Press the [DIAL] (8) key. The display will show **- - - - - d**.
2. Push the number key **#** and enter the DTMF string of characters via the DTMF key pad (12).
3. Once the string is entered, press the [DIAL] (8) again and a hyphen next to the letter **d** will indicate that the string can be saved into one of the nine available memory banks. (The memory bank 0 always repeats the last transmitted DTMF string and cannot be used for long-term storage.)
4. Select a bank by pressing any number between 1 and 9 on the DTMF key pad. The message has now been saved to the selected memory bank and the actual channel is shown in the display.

To clear a wrong entry press the monitor key [MONI] (7). The entire string has to be reentered.

9) Replay a Stored DTMF String Without Transmitting It

Procedure to playback a DTMF string without transmitting it:

1. Press the DTMF key [DIAL] (8). The display reads **- - - - - d**.
2. Press the star key ***** and select one of the programmed memory banks 1 – 9. The memory bank number is displayed next to the letter **d**, while the string is shown in the display. At the same time the DTMF signals can be heard through the speaker.

Once completed, the display shows the actual channel.

10) Transmission of a Stored DTMF String

Procedure to transmit a stored DTMF string:

1. Press the dial key [DIAL] (8). The display will read - - - - - **d**.
2. Select a character string, which is stored in the memory banks 1 – 9, by pressing the assigned key pad number. The selected memory bank will be indicated to the right of the letter **d**, while the string is transmitted.

Every transmitted DTMF tone is played back while the characters are displayed. Once transmission of the string is completed, the actual channel is displayed.

11) Deletion Stored DTMF String of Characters

Procedure to delete a DTMF string of characters that are stored a memory bank:

1. Press the dial key [DIAL] (8). The display shows - - - - - **d**.
2. Press the letter **D** of the DTMF key pad and the display reads **CLr d**
3. Clear the memory bank by pressing the bank number (**1-9**).

To abort the deletion process, press any key except the number keys **1 – 9**.

Note: The memory bank **0** will be cleared every time the PT-3508 (3) is turned off.

Additional Functions and Settings of the TEAM PT-3508 (3)

Some of the following functions need to be programmed with the software T-UP2. In the following description, all functions have been activated. For further information regarding the setup of those functions, see the manual of the software T-UP2.

1) Set Up of the Squelch Threshold

This function is always enabled.

Procedure to set the squelch threshold:

1. Press the function key [FUNC] (9). A low acknowledgement tone is projected through the speaker and the symbol **█** will appear on the left side of the display.
2. Press the TX-Power key [LOW] (11), and the display will show – in the lower left corner, **SqL** in the middle and a number between 0 and 9 on the right side. The number represents the value of the squelch threshold. The higher the number is, the stronger the incoming signal has to be for it to pass the squelch. When the squelch threshold is set to 0, it is deactivated. To lower the threshold, turn the rotary channel selector (3) counterclockwise. Turning the channel selector clockwise will increase the threshold.
3. Press any key to confirm the setting. The actual channel will be displayed again.

2) Temporary Change of the CTCSS Setting

This function is always enabled.

Procedure to temporarily change the CTCSS code of a channel

1. Press the function key [FUNC] (9) for 1 -2 seconds. A low and a high acknowledgement tone are projected and the symbol **█** starts blinking on the left side of the display.
2. Press the monitor key [MONI] (7) and the display will read **OFF**. All prior CTCSS and DQT settings are overridden now.
3. Set the desired CTCSS code by turning the channel selector (3) clockwise or counterclockwise. On the display, the frequency of the CTCSS code shows in the middle and the CTCSS number on the right. There are 39 CTCSS codes available.

To switch back to the prior setting of CTCSS and DQT codes, press any key except the PTT key [PTT] (6) or the monitor key [MONI] (7), or switch off the PT-3508 (3) shortly.

3) Switch of a Channel's Transmission and Reception Settings

This function can only be used if different frequencies for transmission and reception of a channel are set, and/or if the CTCSS / DQT settings for reception and transmission differ. This function switches temporarily all settings of reception and transmission of a channel i.e. the receiver uses the transmitter's frequency and CTCSS or DQT code and vice versa.

To activate the switch function:

1. Press the function key [FUNC] (9), the symbol **█** will be displayed on the left side.
2. Press the dial key [DIAL] (8), the letter **R** in the lower right corner indicates that the switch function is activated.

The switch function can be deactivated by,

- a) pressing the keys [FUNC] (9) and [DIAL] (8),
- b) changing the channel or
- c) switching off the PT-3508 (3).

4) Key Lock Function

This function is useful to prevent involuntary changes of settings by accidentally pushing any keys. Two key lock functions are available, that can be set via the software T-UP2:

- a) Complete Key Lock
deactivates the channel selector (3) and all keys except for the keys [FUNC] (9), [MONI] (7) and [PTT] (6).
- b) Key-Pad Lock
disables only the DTMF key pad (12).

Procedure to activate the key lock function:

1. Press the function key [FUNC] (9) for 1 to 2 seconds until the symbol **█** on the lower left side starts blinking.
2. Press the dial key [DIAL] (8) and the letter **L** on the right side of the display appears to indicate that the key lock function is activated.

To deactivate the key lock functions repeat the aforementioned procedure.

5) Display Background Light Setting

The background light of the display (2) can be set via the software T-UP2 or manually at the PT-3508 (3). There are three available options:

- a) **Auto**
When turning the channel selector or pressing any key except the PTT or monitor key, the background lights turns on and turns off automatically after 5 seconds.
- b) **On**
The background light is permanently on as long as the PT-3508 (3) is turned on.
- c) **Off**
The background lights is permanently off.

Procedure to set the background light:

1. Press the function key [FUNC] (9) for 1 to 2 seconds until the symbol **█** on the lower left side starts blinking.
2. Press the scan key [SCAN] (10) and in the upper right corner the current setting is indicated by one of following symbols: **A** (Auto), **On** and **Off**.
3. Select an option by turning the channel selector.
4. Confirm your selection by pressing any key. The selected background symbol in the upper right side will disappear.

6) Time-Out Timer (TOT)

The PT-3508 (3) has a Time-Out Timer function that limits the uninterrupted transmission time. The time limit can be set by your dealer in 30 sec. steps between 0,5 minutes and 5 minutes. If this function is set OFF, the default time limit is 10 minutes. When the transmission time exceeds the time limit, the transceiver turns off automatically and a warning beep is projected through the speaker. To stop the warning beep and to reactive the transceiver, release the PTT key [PTT] (6).

There are some parameters that can be set for the *TOT* function

a) TOT Pre-Alert

A warning signal can be enabled that will alert you if the time limit is getting close. This Alarm can be set up to 10 seconds before the end of the time limit is reached.

b) TOT Penalty Time

This feature allows to set a penalty time when the time limit for transmission has been exceeded. During this period, that can last a maximum of 60 seconds, transmission is not possible. The time limit can be set in 1-second steps.

c) Transmission Time Counter Reset

This feature allows modifying the reset point for the transmission time counter. If this feature is deactivated, the transmission time counter resets whenever the PTT key is released. With this feature activated, separate transmission periods will be counted as one if they follow each other in a set period. The maximum time between two transmission periods can be set to 15 seconds. If transmission periods start within this set time, the transmission time counter will continue. If two following transmission periods are further apart than the set time, the transmission time counter resets.

7) Transmission Lock on Busy Channels

The transmission lock on occupied channels disables the transmitter if certain conditions are not met. Pushing the PTT key will not activate the transmitter.

a) Busy Channel

If another station sends a signal, the transmitter is disabled for the time the channel is busy. When pushing the PTT key while another station is transmitting, a warning beep is projected and the PT-3508 (3) switches automatically back to reception mode. Transmission is only possible if no signal is sent on the channel.

b) CTCSS and DQT Encoded Signals


If the incoming signal is encoded with CTCSS or DQT, it can be transmitted while this signal is on air.

c) DTMF Encoded Signals

If the incoming signal uses a DTMF code, it can be transmitted while the channel is busy.

8) Transmit Power Switch


With the software T-UP2, each individual channel can be set to low or high transmit power. If a channel has been assigned high transmitting power, transmitting power can be switched between high and low. Channels that have been assigned a low transmitting power cannot be switched to high transmitting power.

To switch between high and low transmitting power press the transmitting power key [LOW] (11). The symbol  in the lower left corner of the display indicates low transmitting power. High transmitting power has no symbol assigned.

9) Vox-Function

The VOX function, voice-activated-transmission, allows transmitting without pushing the PTT key. With the VOX function enabled, PT-3508 (3) starts transmitting automatically if the sound intensity of the signal received by the microphone exceeds a set value. As soon as the signal's sound intensity falls below the set level, the handheld switches back to reception mode after a holding time. When an incoming signal deactivates the squelch, the VOX function is deactivated.

Procedure to set the VOX function:

1. Press the function key [FUNC] (9) for 1 to 2 seconds until the symbol  on the lower left side starts blinking.
2. Press the transmitting power key [LOW] (11). In the display, the symbol **VOX** starts blinking and one of the following four VOX levels are indicated: **OF**, **1**, **2** and **3** - the higher the number the higher the VOX intensity. **OF** indicates that the VOX function is deactivated. Turn the channel selector clockwise or counterclockwise, to change the setting.
3. Press any key to confirm your selection. The display will return to the regular screen. Only if the VOX function is activated, the symbol **VOX** will appear.

When talking loud enough into the microphone, the LED (4) emits red light and the bar indicator shows the signal strength. The distance from your mouth to the microphone should be approximately 5 cm. 1 - 2 seconds after the end of the message, the unit returns to the receiving mode and the LED (4) stops emitting red light.

For the VOX mode operation, we recommend the use of an earphone-microphone.

General

1) Security

The handheld transmit high-frequency energy. To reduce exposure to a minimum, please follow these procedures:

- When transmitting, keep the PT-3508 (3) in an upright position with a distance of 5 cm to your mouth.
- Keep the antenna at least 7.5 cm from your head and body.
- When you carry the PT-3508 (3) at your body, make sure to keep the handheld at least 7.5 cm away from your body during transmission.

2) Service

Check the rechargeable battery pack's condition occasionally. If the rechargeable battery pack needs to be recharged after a short period of usage, it might be necessary to replace it.

Used rechargeable battery packs should not be disposed in the regular garbage. Bring them to your dealer, for the environment's sake.

Do not open the PT-3508 (3). Do not try to repair or modify the PT-3508 (3) by yourself. Any modification can cause the withdrawal of your license and the loss of guarantee and repair claims. Should your PT-3508 (3) have a defect, please contact your dealer or TEAM Electronic GmbH directly.

3) Declaration of Conformity

The transceiver TEAM PT-3508 (3) complies with the rules of the European Directive T&TTE and meets the European Telecommunication Standards EN 300 296, EN 300 086, EN 301 489-1/-5 and EN 60065.

4) Programmed Channels

Channel	Transmitting Frequency (MHz)	TX Encoding	Receiving Frequency (MHz)	RX Encoding	Bandwidth narrow / wide	DTMF enabled / disabled	Transmission Lock on Busy Channels
1	446,00625		446,00625		narrow	disabled	disabled
2	446,01875		446,01875		narrow	disabled	disabled
3	446,03125		446,03125		narrow	disabled	disabled
4	446,04375		446,04375		narrow	disabled	disabled
5	446,05625		446,05625		narrow	disabled	disabled
6	446,06875		446,06875		narrow	disabled	disabled
7	446,08125		446,08125		narrow	disabled	disabled
8	446,09375		446,09375		narrow	disabled	disabled
9							
10							
11							
12							
13							
14							
15							
16							
17							
18							
19							
20							
21							
22							
23							
24							
25							
26							
27							
28							
29							
30							
31							
32							
33							
34							
35							
36							
37							
38							
39							
40							
41							
42							
43							
44							
45							
46							
47							
48							
49							
50							

5) Programmed Functions

Note the functions that your dealer has programmed for you

DTMF Mute Control Function

Code-Squelch	Selective Calling

DTMF Code

Code-Squelch	Selective Calling

Set Up of the Monitor Key

No function	Temporary Activation of CTCSS- and DQT- muting function	Toggle Between Activation & Deactivation of CTCSS and DQT muting function	Temporary Activation of Squelch, CTCSS- and DQT-muting function

Transmission Time Limiter

Time Limit [min]	Pre-Alert [s]

6) Specifications

PMR-Frequencies:

Channel No.	Frequency [MHz]		
1	446.00625	5	446.05625
2	446.01875	6	446.06875
3	446.03125	7	446.08125
4	446.04375	8	446.09375

Bandwidth:	12.5 kHz
Transmitting Power:	500 mW
Modulation:	FM
Deviation:	max. 2.5 kHz (narrow)
RX-Sensitivity:	+ 14 dBµV/m (narrow)
NF-Output Power:	0,56 W at 8 Ω with 10 % THD
Supply Voltage:	5.5 – 7.5 V
Current Consumption:	TX: 490 mA
HAM Radio:	
Frequency Range:	430 MHz – 440 MHz
Resolution:	6.25 kHz; 5 kHz
Channel Spacing:	narrow: 12.5 kHz / wide: 25 kHz
Transmitting Power:	max. 5 W
Modulation:	FM
Deviation:	narrow: 2.5 kHz / wide: 5 kHz
RX-Sensitivity:	narrow: + 14 dBµV/m / breit: + 8 dBµV/m
NF-Output Power:	0.56 W at 8 Ω with 10 % THD
Supply Voltage:	5.5 – 7.5 V
Current Consumption:	TX (Low): 490 mA; TX (High): 1.6 A

	RX without standby mode : 100 mA
	RX with standby mode: 30 mA
Dimensions (cabinet only):	B/H/T: 61 x 130 x 29 mm
Weight with Antenna and Battery Pack:	300 g

8) CTCSS-Töne / CTCSS tones & DQT Codes

Code	Frequ. (Hz)	Code	Frequ. (Hz)	Code	Frequ. (Hz)	Code	Frequ. (Hz)	Code	Frequ. (Hz)
1	67,0	9	88,5	17	114,8	25	151,4	33	203,5
2	69,3	10	91,5	18	118,8	26	156,7	34	210,7
3	71,9	11	94,8	19	123,0	27	162,2	35	218,1
4	74,4	12	97,4	20	127,3	28	167,9	36	225,7
5	77,0	13	100,0	21	131,8	29	173,8	37	233,6
6	79,7	14	103,5	22	136,5	30	179,9	38	241,8
7	82,5	15	107,2	23	141,3	31	186,2	39	250,3
8	85,4	16	110,9	24	146,2	32	192,8		

DQT-Codes


Code	Code	Code	Code	Code	Code
D023N	D114N	D174N	D315N	D445N	D631N
D025N	D115N	D205N	D331N	D464N	D632N
D026N	D116N	D223N	D343N	D465N	D654N
D031N	D125N	D226N	D346N	D466N	D662N
D032N	D131N	D243N	D351N	D503N	D664N
D043N	D132N	D244N	D364N	D506N	D703N
D047N	D134N	D245N	D365N	D516N	D712N
D051N	D143N	D251N	D371N	D532N	D723N
D054N	D152N	D261N	D411N	D546N	D731N
D065N	D155N	D263N	D412N	D565N	D732N
D071N	D156N	D265N	D413N	D606N	D734N
D072N	D162N	D271N	D623N	D612N	D743N
D073N	D165N	D306N	D431N	D624N	D754N
D074N	D172N	D311N	D432N	D627N	

DQT-Codes

Code	Code	Code	Code	Code	Code
D023I	D114I	D174I	D315I	D445I	D631I
D025I	D115I	D205I	D331I	D464I	D632I
D026I	D116I	D223I	D343I	D465I	D654I
D031I	D125I	D226I	D346I	D466I	D662I
D032I	D131I	D243I	D351I	D503I	D664I
D043I	D132I	D244I	D364I	D506I	D703I
D047I	D134I	D245I	D365I	D516I	D712I
D051I	D143I	D251I	D371I	D532I	D723I
D054I	D152I	D261I	D411I	D546I	D731I
D065I	D155I	D263I	D412I	D565I	D732I
D071I	D156I	D265I	D413I	D606I	D734I
D072I	D162I	D271I	D623I	D612I	D743I
D073I	D165I	D306I	D431I	D624I	D754I
D074I	D172I	D311I	D432I	D627I	

TEAM PT3508 (3)

for sale and use in :

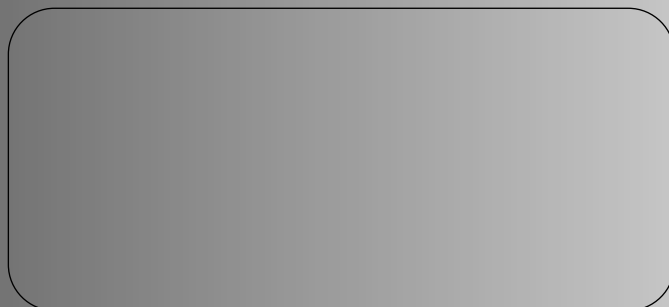

Team Electronic GmbH

Bolongarostrasse 88
65929 Frankfurt am Main

Tel. 069 - 30 09 50 - 0

Fax 069 - 31 43 82

eMail team-electronic@t-online.de

Web Seite www.team-electronic.de

