



M-550 POWER

FREQUENCY (BANDS) AND TX POWER SETTINGS

FREQUENCY (BANDS) SETTINGS

BLUE COLOR JUMPERS (OPT 1, OPT 2)

Pin 24 Option 3			Detail	Country / Frequency															
	Code	1		2	3	4	5	6	7	8	9	00	11	12	13	14	15	16	
	Band	I		I2	D	D2	EU	CEPT	UK	PL	Band A	Band B	Band C	Band D	Band E	Band F	Band G	Band H	
1	0	1	European + International Bands		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
1	1	0	European Bands only		✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗	✗	

Remarks : "0" = Short Circuit

"1" = Open Circuit

Remarks : ✓ = Enable

✗ = Disable

TX POWER SETTINGS

RED COLOR JUMPERS (LK2, LK5, LK6)

STANDARD POWER (4W) SETTING

1) Jumpers :

LK2 Open Circuit

LK5 Open Circuit

LK6 Open Circuit

HIGH POWER (12W) SETTING

1) Jumpers :

LK2 Short Circuit

LK5 Short Circuit

LK6 Short Circuit

2) Remove C 331K

Additional Informations :

1) Adjust Coils L311, L312, L313
for maximum RF output

2) Adjust RV4 for correct Meter reading

PCB LAYOUT - (MAIN) BOTTOM SCREEN

