



### ***To Customers***

*Thank you very much for using our VHF/UHF transceiver. This radio of modern design is reasonable structure with stable functions. It is designed to meet customer's needs for the high quality with easy operation and perfect capability.*

|  |           |
|--|-----------|
| <b>1. For Your Safety</b> .....            | <b>08</b> |
| 1.1 Keys and part .....                    | 08        |
| <b>2. Get started</b> .....                | <b>14</b> |
| 2.1 Install SIM card and battery .....     | 14        |
| 2.2 Charging .....                         | 15        |
| 2.3 Power on/off .....                     | 16        |
| 2.4 Use headset .....                      | 16        |
| <b>3. Radi</b> .....                       | <b>17</b> |
| 3.1 Maninterance .....                     | 17        |
| 3.2 Unpacking and checking equipment ..... | 17        |
| 3.3 Interphone menu tree .....             | 20        |
| 3.4 Basic function .....                   | 20        |
| 3.4.1 Power .....                          | 20        |
| 3.4.2 Push to talk .....                   | 20        |
| 3.4.2.1 Save .....                         | 20        |
| 3.4.2.2 T Frequency Alterable .....        | 20        |
| 3.4.2.3 SQL .....                          | 20        |
| 3.4.2.4 Power .....                        | 20        |
| 3.4.2.5 S-D .....                          | 20        |
| 3.4.2.6 Power .....                        | 20        |
| 3.4.2.7 Differ .....                       | 20        |
| 3.4.2.8 Vox .....                          | 21        |
| 3.4.2.9 R.Encode .....                     | 21        |
| 3.4.2.10 T.Encode .....                    | 21        |

|  |           |
|--|-----------|
| 3.4.2.11 Scans .....                                       | 21        |
| 3.4.2.12 Scan switch .....                                 | 22        |
| 3.4.2.13 TOT .....   | 22        |
| 3.4.2.14 Bandwidth .....                                   | 22        |
| 3.4.2.15 Interphone Lock .....                             | 22        |
| 3.4.2.16 Dual Channel Mode .....                           | 22        |
| 3.4.3 Mode Select .....                                    | 23        |
| 3.4.4 Lamp .....   | 23        |
| 3.4.5 Data deliver .....                                   | 23        |
| 3.4.6 Help .....   | 23        |
| <b>4. The phone menu tree</b> .....                        | <b>24</b> |
| <b>5. Basic Function</b> .....                             | <b>29</b> |
| 5.1 Switch the phone on/off .....                          | 29        |
| 5.2 Make a call .....                                      | 29        |
| 5.3 Make an intermational call .....                       | 29        |
| 5.4 Answer or reject a call .....                          | 30        |
| 5.4.1 Answer a call .....                                  | 30        |
| 5.4.2 Reject a call .....                                  | 30        |
| 5.4.3 End a call .....                                     | 30        |
| 5.5 During a call .....                                    | 30        |
| 5.5.1 To change the ear speaker volume during a call ..... | 30        |
| 5.5.2 To use the loudspeaker during a call .....           | 30        |
| 5.5.3 Calling options .....                                | 31        |

|                       |           |
|-----------------------|-----------|
| <b>6. Phonebook</b>   | <b>32</b> |
| 6.1 Quick search      | 32        |
| 6.2 Search contact    | 32        |
| 6.3 Add new contact   | 33        |
| 6.4 Copy all          | 33        |
| 6.5 Delete            | 33        |
| 6.6 Caller groups     | 33        |
| 6.7 Extra numbers     | 33        |
| 6.8 Settings          | 34        |
| <b>7. Multimedia</b>  | <b>35</b> |
| 7.1 Camera            | 35        |
| 7.1.1 Photos          | 35        |
| 7.1.2 Camera settings | 35        |
| 7.1.3 Image settings  | 35        |
| 7.1.4 White balance   | 36        |
| 7.1.5 Scene mode      | 36        |
| 7.1.6 Effect setting  | 36        |
| 7.1.7 Storage         | 36        |
| 7.1.8 Restore default | 36        |
| 7.2 Image viewer      | 36        |
| 7.3 Video player      | 37        |
| 7.4 Audio player      | 37        |
| 7.5 FM radio          | 39        |
| 7.6 Smart TV          | 39        |

|                               |           |
|-------------------------------|-----------|
| 7.7 File manager              | 39        |
| 7.8 Fun&Games                 | 40        |
| <b>8. Call center</b>         | <b>41</b> |
| 8.1 Call history              | 41        |
| 8.1.1 SIM1 call history       | 41        |
| 8.1.2 SIM2 call history       | 41        |
| 8.2 General Call setting      | 47        |
| 8.2.1 SIM1 call settings      | 47        |
| 8.2.2 SIM2 call settings      | 48        |
| 8.2.3 Black list              | 48        |
| 8.2.4 Auto redial             | 48        |
| 8.2.5 Speed dial              | 48        |
| 8.2.6 IP dial                 | 48        |
| 8.2.7 More                    | 48        |
| <b>9. Settings</b>            | <b>49</b> |
| 9.1 Dual SIM settings         | 49        |
| 9.2 Phone setup               | 49        |
| 9.2.1 Time and date           | 49        |
| 9.2.2 Schedule power on/off   | 49        |
| 9.2.3 Language                | 49        |
| 9.2.4 Pref. input methods     | 50        |
| 9.2.5 Display characteristics | 50        |
| 9.2.6 Greeting text           | 50        |
| 9.2.7 Shortcuts               | 50        |

|  |           |
|--|-----------|
| 9.2.8 Dedicated key .....                | 50        |
| 9.2.9 Auto update of date and time ..... | 51        |
| 9.2.11 Misc setting .....                | 51        |
| 9.3 Network setup .....                  | 51        |
| 9.4 Security setup .....                 | 51        |
| 9.4.1 SIM1 security setup .....          | 51        |
| 9.4.2 SIM2 security setup .....          | 52        |
| 9.4.3 Phone lock .....                   | 52        |
| 9.4.4 Auto keypad lock .....             | 53        |
| 9.4.5 Change password .....              | 53        |
| 9.5 Restore factory settings .....       | 53        |
| 9.6 Sound effect .....                   | 53        |
| <b>10. Messages .....</b>                | <b>54</b> |
| 10.1 Text message .....                  | 54        |
| 10.1.1 Write message .....               | 54        |
| 10.1.2 Inbox .....                       | 55        |
| 10.1.3 Outbox .....                      | 56        |
| 10.1.4 Templates .....                   | 56        |
| 10.1.5 Text message settings .....       | 56        |
| 10.2 MMS .....                           | 58        |
| 10.2.1 Write message .....               | 58        |
| 10.2.2 Inbox .....                       | 59        |
| 10.2.3 Outbox .....                      | 59        |
| 10.2.4 Drafts .....                      | 59        |

|                                  |           |
|----------------------------------|-----------|
| 10.2.5 Templates .....           | 59        |
| 10.2.6 MMS settings .....        | 59        |
| 10.3 Voice mail server .....     | 61        |
| 10.4 Broadcast message .....     | 62        |
| <b>11. User profiles .....</b>   | <b>63</b> |
| 11.1 General .....               | 63        |
| 11.2 Meeting .....               | 64        |
| 11.3 Outdoor .....               | 64        |
| 11.4 Indoor .....                | 65        |
| 11.5 Headset .....               | 66        |
| <b>12. Organizer .....</b>       | <b>67</b> |
| 12.1 QQ .....                    | 67        |
| 12.2 Calendar .....              | 67        |
| 12.3 To do .....                 | 68        |
| 12.4 Alarm .....                 | 68        |
| 12.5 Calculator .....            | 68        |
| 12.6 Unit converter .....        | 69        |
| 12.7 Currency converter .....    | 69        |
| 12.8 World clock .....           | 70        |
| <b>13. Services .....</b>        | <b>71</b> |
| 13.1 WAP .....                   | 71        |
| 13.2 Data account .....          | 71        |
| <b>14. Text Input .....</b>      | <b>72</b> |
| 15.1 Function Introduction ..... | 72        |

|   |           |
|---|-----------|
| 15.2 Switch input method .....          | 72        |
| 15.3 Keypad Input .....                 | 72        |
| 15.3.1 abc/ABC .....                    | 72        |
| 15.3.2 123 .....                        | 73        |
| 15.3.3 Interpunction input .....        | 73        |
| <b>16. Appendix .....</b>               | <b>74</b> |
| 16.1 Care and Maintenance .....         | 74        |
| 16.1.1 Battery and Charger Safety ..... | 74        |
| 16.1.2 Phone Maintenance .....          | 75        |
| 16.2 FAQ .....                          | 76        |
| 16.3 Caution .....                      | 78        |

## 1. For Your Safety



Please read these simple guidelines. Not following them may be dangerous or illegal.



### **ROAD SAFETY COMES FIRST**

Do not use the phone hand-held while driving. If using the phone hand-held, park the vehicle before conversing.



### **SWITCH OFF IN AIRCRAFT**

Switch your phone off when on an aircraft. The aircraft's systems may be affected by the phone signal. You are legally obliged to comply with this recommendation.



### **SWITCH OFF NEAR BLASTING**

Switch your phone off when blasting is in progress. Observe any provided guidelines or regulations.



### **SWITCH OFF WHEN REFUELING**

Do not use your phone when refueling. You should keep you phone away from fuel and chemicals.



### **SWITCH OFF IN HOSPITALS**

Follow any restrictions . Switch the phone off near medical equipment.

**INTERFERENCE**

All wireless phones may be susceptible to interference , which could affect performance.

**ENHANCEMENTS AND BATTERIES**

Use only approved enhancements and batteries. Do not connect incompatible products.

**USE SENSIBLY**

Use only in the normal position as explained in the produce documentation. Do not touch the antenna unnecessarily.

**EMERGENCY CALLS**

Ensure the phone is switched on and in service. Enter the emergency number ,then press the call key. Give your location. Do not end the call until given permission to do so.

**1.1 Keys and Part**

| Keys                          | Description   |
|-------------------------------|---|
| Left Soft Key/ SIM 1 Talk Key | Perform the function indicated by the text above it.<br>For example, Menu in Idle mode.<br>Dial a phone number from SIM 1, and answers a call.  |
| Right Soft Key                | Perform the function indicated by the text above it.<br>For example, Phone book in Idle mode.   |
| Up / Down / Left / Right Key  | In idle, Up/Down/Left/Right Key: press they to select quickly access .<br>Press the Up Key enter audio player.<br>Press the Down Key enter into alarm.<br>Press the Left Key enter into user profiles.<br>Press the Right Key enter into Shortcuts. |
| OK Key                        | In idle, enter into the menu.<br>Is equal with the definite function, as Right soft key.(In interphone idle, select the frequency mode)   |
| SIM 2 Talk Key                | Dial a phone number from SIM 2 ,and answers a call.<br>In idle: press to show SIM 2 the most recently Call Logs list  |
| Audio Player Key              | In idle, press it can enter into audio player.  |
| 0~9 Number Key                | In idle, press to input numbers; Long press it to speed dial;<br>In editor, press to input numbers or words;  |

|                   |  |
|-------------------|--|
| *Key              | In idle, press it to input "*" / "+" / "P" / "W"<br>In editor, press to input sign;  |
| #Key              | In idle, long press it to switch the profile;<br>In editor, press to change input method.                                      |
| End Key/Power Key | Switches the phone on and off. This key also is used to end a call or to exit from any function and finally back to idle mode. |

ANTENNA

 
NAVIGATION KEY

LEFT SOFT KEY

RADIO SHORTCUT KEY

DIAL-UP KEY

KEYPAD

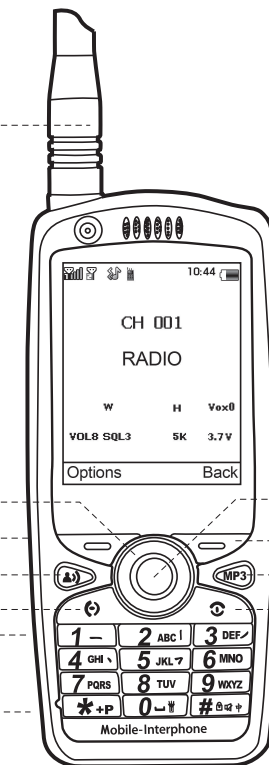


OK KEY

RIGHT SOFT KEY

MP3 SHORTCUT KEY

 END KEY/POWER KEY

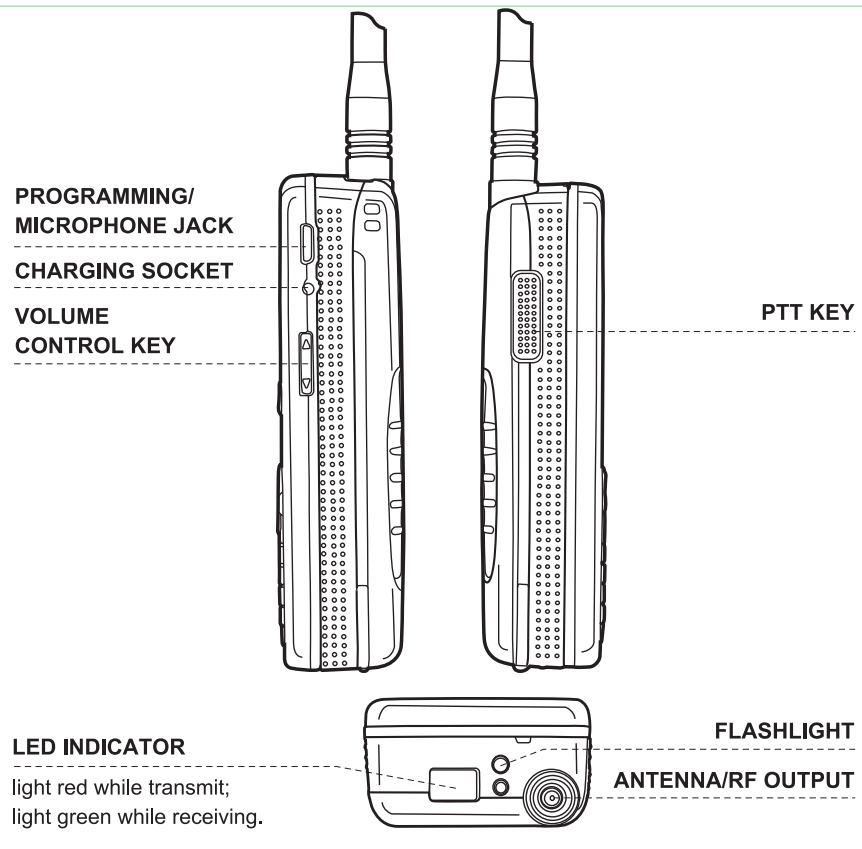

## 2. Get started

### 2.1 Install SIM card and battery

For availability information on using SIM card services, contact your SIM card vendor.

 
#### ⚠ Notices:

- Keep all SIM cards out of the reach of the children;
- Please do not touch the metal area to avoid losing and breaking the information in the SIM card. Put the SIM card far from electricity and magnetism.

#### Remove Battery:


Long press the End Key to power off.

1. Install or remove the back cover.
2. Take out battery: face the backside of the phone, take out the battery just by lifting it up.

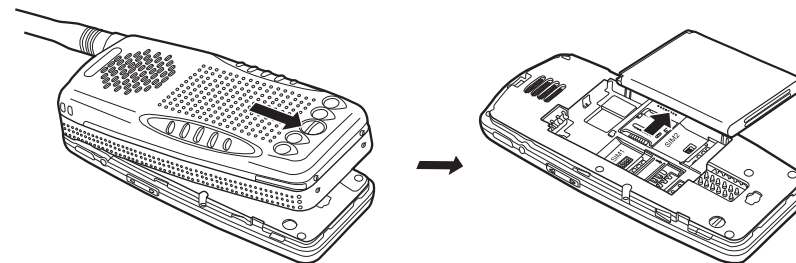

### Install SIM card and Memory card

 Find the slot place, open the button, and then put the card into it and buckled to fix the card. Make sure that the gold-colored contacts on the card face down into the phone, and notice the angles cutting.

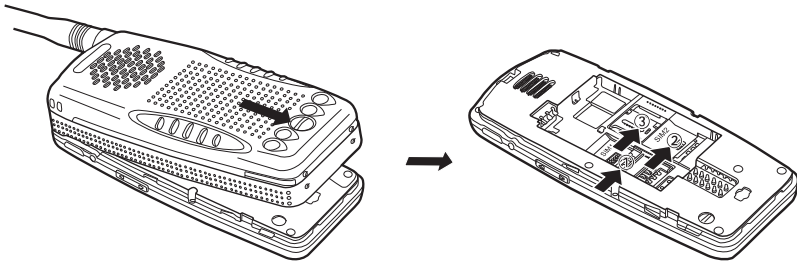


### 2.2 Charging

Use only original charger or authorized one for this phone.

Insert the plug (with arrow on it) of your charger to the charging port at the base of your phone. When you begin to charge the battery, the stripe of Signal Strength on the right corner of the screen starts to roll. The battery is fully charged when the stripe becomes full and stops rolling. Push the buttons on both sides of the charger to take out the plug.

#### ⚠ Notices:

 - (1) Please use the battery after it is used up completely and then charged full for the first three times, your battery will be in the best status;
- (2) You may use the phone when it is charged, but it will extend the charge time;
- (3) If the battery is completely discharged, the phone will auto off.

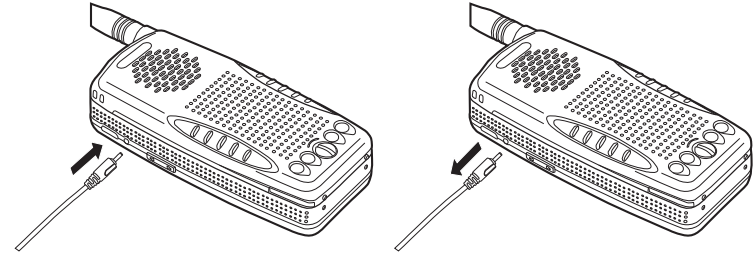

### 2.3 Power on/off

Long press End Key to power on and the backlight brighten, and then display the on animation. If the phone asks for a PIN code, enter the PIN code, and select "OK".

The factory setting for the lock code is 0000.

Long press End Key again to power off.

### 2.4 Use headset

Connect the headset to the wall socket:

Answer a call: press the headset key to answer;

End a call: press the headset key to end;

If you set Auto answer mode, the call will be automatically answered.

Please see "[User Profiles->Headset->Customize->Answer mode->Auto]".

### 3. Radio

#### 3.1 Maintenance

- Your two way radio is an electronic product of exact design and should be treated with care .The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years.
- Do not attempt to open the unit. Non-expert handing of the unit may damage it.
- When using regulated power supply, take notice of power voltage must be between 6V and 8V to avoid damaging the unit.
- Do not store the radio under the sunshine or in hot areas. High temperatures can shorten the life of electronic devices, and warp or melt certain plastics.
- Do not store the radio in dusty, dirty areas.
- Keep the radio dry, Rainwater or drop will corrode electronic circuits.
- If it appears that the radio diffuses peculiar smell or smoke , please shut off its power immediately and take off charger or battery in the radio, then contact with the agency.
- Do not transmit without antenna.

#### 3.2 Unpacking and checking equipment

Carefully unpack the radio. We will recommend that you identify the items listed in the following table before discarding the packing material. If any items are missing or have damaged during shipment, file a claim with the carrier immediately.

#### Supplied Accessories

| ITEMS        | QUANTITY |
|--------------|----------|
| Antenna      | 2        |
| Battery      | 1        |
| USB Charger  | 1        |
| Users Manual | 1        |
| Earphone     | 1        |
| Charger      | 1        |
| Leather case | 1        |

#### 3.3 Interphone menu tree

| First stage  | Second stage          | Third stage                       |
|--------------|-----------------------|-----------------------------------|
| Power        |                       |                                   |
| Push to talk | Save                  | Channel Index(1-128)/Channel Name |
|              | T Frequency Alterable | OFF/ON                            |
|              | SQL                   | OFF/SQL1-SQL8                     |
|              | Power                 | HIG/LOW                           |
|              | S-D                   | OFF/+/-                           |

|              |                   |                                  |
|--------------|-------------------|----------------------------------|
|              | Differ            | 00.000-69.955MHz                 |
|              | Step              | 5KHz/10KHz/6.25KHz/12.5KHz/25KHz |
|              | Vox               | Vox off/ Vox 1-8                 |
|              | R.Encode          | Ecoder/CTCSS(Hz)/DCS(N)/DCS(i)   |
|              | T.encode          | Ecoder/CTCSS(Hz)/DCS(N)/DCS(i)   |
|              | SCANS             | TO/CO/SE                         |
|              | Scan switch       |                                  |
|              | TOT               | Close/1min-6min                  |
|              | BANDWIDTH         | Narrow/Wide                      |
|              | Interphone Lock   |                                  |
|              | Dual Channel Mode |                                  |
| Mode Select  | Phone             |                                  |
|              | Interphone        |                                  |
|              | Phone Better      |                                  |
|              | Interphone Better |                                  |
| Lamp         | ON/OFF            |                                  |
| Data deliver | ON/OFF            |                                  |
| help         |                   |                                  |

### 3.4 Basic function

#### 3.4.1 Power

Press off or on key to shut or use this interphone, it is very convenience to use .

#### 3.4.2 Push to talk

##### 3.4.2.1 Save

- Channel Index: You can select the channel number by hand from 1 to 128
- Channel Name: You can edit the channel name freely, and the words should be limited in 5.

##### 3.4.2.2 T Frequency Alterable

Turn off or turn on

##### 3.4.2.3 SQL

There are SQL1-SQL8 to be selected.

##### 3.4.2.4 Power

Low or high

##### 3.4.2.5 S-D

This function include off/+/-

##### 3.4.2.6 Power

Low or high

##### 3.4.2.7 Differ

It is not support auto input ,you can input the differ from the number key.

**3.4.2.8 Step**

You can adjust the S-D in 5KHz-25 KHz

**3.4.2.8 Vox**

It conclude 8 vox levels to be selected , you can select anyone in your need, or you can turn it off.

**3.4.2.9 R.Encode**

It conclude Ecoder/CTCSS(Hz)/DCS(N)/DCS(I),and its flexible ,can be changed and edited in needs.

**3.4.2.10 T.Encode**

It conclude Ecoder/CTCSS(Hz)/DCS(N)/DCS(I),and its flexible ,can be changed and edited in your fact needs.

**3.4.2.11 Scans**

Before scan,you must decide how and in which condition to keep scanning when your interphone check a signal ,there are 3 modes to be choosed;

- TO

The interphone will stop scanning when it get a signal,and after 5s,it will start again, although the signal is still there.

- CO

The interphone will stop scanning when get a signal, and and will keep in touch with the same frequency until it disappear ,during the disappear and the next scan there will be 2s delay time to make sure the successful transmit.

- SE

When the interphone get a signal ,it will stop scanning,and shut down the scan and keep the frequency

**3.4.2.12 Scan switch**

Put on this fuction,you can start to scan the frequency.

**3.4.2.13 TOT**

Uncertainty persistent transmit will damage the interphone,in order to avoid it, we provide 1min to 7min persistent transmit limited time and warnings.

**3.4.2.14 Bandwidth**

You can choose narrow or wide encoder.

**3.4.2.15 Interphone Lock**

There are two ways of lock for selection, automatic and manual, when you select the automatic lock, the display of interphone will be locked without any reason in 10ms, and when you choose the manual lock ,you have to press the key "#" for a long time to open or close the lock.

**3.4.2.16 Dual Channel Mode**

The right way to use this function is: at first, store the frequency you need in Save, then presss the OK key to select only cchannel mode ,get into dual channel

mode menu, “set up-increase channel A- increase channel B, then open the dual channel, then you can receive and send 2 signals in the same time .

### 3.4.3 Mode Select

This function contains Phone, Interphone, Phone Better, Interphone Better,you can select any mode by your fact needs.

### 3.4.4 Lamp

It is an extra function,and you can choose to turn it on in the night. Long press key0\* in phone idle will turn on or off the lamp.

### 3.4.5 Data deliver

You can set it open or close, close the interphone at first. Connect the PC and phone use data ling, then open the data deliver function, can write frequency use software on PC. (Notice: finished the wrote must reset the phone.)

### 3.4.6 Help

This document may provide you a simple introduce to how to use the interphone correctly.

## 4. The phone menu tree.

| First stage | Second stage      | Third stage |                      |
|-------------|-------------------|-------------|----------------------|
| 1 Phonebook | 1 Quick search    |             |                      |
|             | 2 Search          |             |                      |
|             | 3 Add new contact |             | 1 to SIM1            |
|             |                   |             | 2 to SIM2            |
|             |                   |             | 3 to phone           |
|             | 4 Copy all        |             | 1 from SIM1to phone  |
|             |                   |             | 2 from phone to SIM1 |
|             |                   |             | 3 from SIM2 to phone |
|             |                   |             | 4 from phone to SIM2 |
|             |                   |             | 5 from SIM1 to SIM2  |
|             |                   |             | 6 from SIM 2to SIM 1 |
|             | 5 Delete          |             | 1 from SIM 1         |
|             |                   |             | 2 from SIM 2         |
|             |                   |             | 3 from phone         |
|             |                   |             | T4 One by one        |
|             | 6 Caller groups   |             | 1 friends            |
|             |                   |             | 2 family             |
|             |                   |             | 3 VIP                |
|             |                   | 4 business  |                      |
|             |                   | 5 Others    |                      |

|               |                         |                      |
|---------------|-------------------------|----------------------|
|               | 7 Extra numbers         | 1 SIM1 owner number  |
|               |                         | 2 SIM1 owner number  |
|               | 8 Settings              | 1 Memory status      |
|               |                         | 2 Preferred storage  |
|               |                         | 3 Fields             |
| 2 Multimedia  | 1 Camera                |                      |
|               | 2 Image viewer          |                      |
|               | 3 Video player          |                      |
|               | 4 Audio player          |                      |
|               | 5 FM radio              |                      |
|               | 6 Smart TV              |                      |
|               | 7 File manager          |                      |
|               | 8 Fun & Games           |                      |
| 3 Call center | 1 Call history          | 1 SIM1 call history  |
|               |                         | 2 SIM2 call history  |
|               | 2 General call settings | 1 SIM1 call settings |
|               |                         | 2 SIM2 call settings |
|               |                         | 3 Black list         |
|               |                         | 4 Auto redial        |
|               |                         | 5 Speed dial         |
| 6 IP dial     |                         |                      |
| 7 More        |                         |                      |

|                    |                     |                                |
|--------------------|---------------------|--------------------------------|
| 4 Settings         | 1 Dual SIM settings | 1 Dual SIM open                |
|                    |                     | 2 Only SIN1 open               |
|                    |                     | 3 Only SIM2 open               |
|                    |                     | 4 Flight mode                  |
|                    | 2 Phone setup       | 1 Time and date                |
|                    |                     | 2 Schedule power on/off        |
|                    |                     | 3 language                     |
|                    |                     | 4 Pref.input methods           |
|                    |                     | 5 Display characteristics      |
|                    |                     | 6 Greeting text                |
|                    |                     | 7 Shortcuts                    |
|                    |                     | 8 Dedicated key                |
|                    |                     | 9 Auto update of date and time |
|                    |                     | 10 Key press vibrate           |
|                    |                     | 11 Misc.settings               |
|                    | 3 Network setup     | 1 SIM1 network setup           |
|                    |                     | 2 SIM2 network setup           |
|                    | 4 Security setup    | 1 SIM 1 security setup         |
|                    |                     | 2 SIM2 security setup          |
|                    |                     | 3 phone lock                   |
| 4 Auto keypad lock |                     |                                |
| 5 Chang password   |                     |                                |

|                 |                            |                          |
|-----------------|----------------------------|--------------------------|
|                 | 5 Restore factory settings |                          |
|                 | 6 Sound effect             |                          |
|                 | 1 Text message             | 1 Write message          |
|                 |                            | 2 Inbox                  |
|                 |                            | 3 Outbox                 |
|                 |                            | 4 Templates              |
|                 |                            | 5 Text message settings  |
|                 | 2 MMS                      | 1 Write message          |
|                 |                            | 2 Inbox                  |
|                 |                            | 3 Outbox                 |
|                 |                            | 4 Drafts                 |
|                 |                            | 5 Templates              |
|                 |                            | 6 MMS settings           |
|                 | 3 Voice mail server        | 1 SIM1 voice mail server |
|                 |                            | 2 SIM2 voice mail server |
|                 | 4 Broadcast message        | 1 SIM1 broadcast message |
|                 |                            | 2 SIM2 broadcast message |
| 7 User profiles | 1 General                  |                          |
|                 | 2 Meeting                  |                          |
|                 | 3 Outdoor                  |                          |
|                 | 4 Indoor                   |                          |

|             |                         |  |
|-------------|-------------------------|--|
|             | 5 Headset               |  |
| 8 Organizer | 1 QQ                    |  |
|             | 2 Calendar              |  |
|             | 3 To do                 |  |
|             | 4 Alarm                 |  |
|             | 5 Calculator            |  |
|             | 6 Unit converter        |  |
|             | 7 Currency converter    |  |
|             | 8 World clock           |  |
| 12 Services | 1 WAP                   |  |
|             | 2 Data account          |  |
|             | 3 Connection management |  |

## 5. Basic Function

### 5.1 Switch the phone on/off

Long press End Key to power on and the backlight brighten, and then display the on animation.

If you power on without SIM card, the phone will prompt "Insert SIM".

If the phone asks for a PIN code, input the PIN code, and select "OK".

The factory setting for the lock code is 0000.

Long press End Key again to power off.

### 5.2 Make a call

1 ) In the idle mode, enter the area code and the phone number ,and then press SIM1

Talk Key dial from SIM1 ,press SIM2 talk key dial a number from SIM 2.

#### Notices:

press the clear key to remove a number, long press to remove all.

2 ) To make a call from the Phone Book , Scroll to the desired name, or enter the first letters of the name, and scroll to the desired name. To call the number from SIM1 or

SIM2.

### 5.3 Make an international call

Presses the "\*" twice directly for the international prefix (the + character replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number. Press SIM 1 Talk key or SIM2 talk key ,To call the number from SIM1 or SIM2.

## 5.4 Answer or reject a call

### 5.4.1 Answer a call

To receive a call, press Talk Key, To answer the call

### 5.4.2 Reject a call

When an coming, press the Right Soft Key or End Key to reject a call.

### 5.4.3 End a call

During a call press End Key to end a call.

## 5.5 During a call

### 5.5.1 To change the ear speaker volume during a call

During an activate call, press the Upside key and Downside key to adjust volume.

If the Loudspeaker is activated, use press the Upside key and Downside key to adjust volume.

### 5.5.2 To use the loudspeaker during a call

Loudspeaker mode turns your handset into a loudspeaker during a call. Do not hold the handset to your ear if loudspeaker mode is set on. To activate/deactivate the loudspeaker during a call, press (Right Soft Key) H-Free/ H-Held.

- ◆ Loudspeaker is automatically deactivated when you end the call or call attempt or connect a headset to the phone.

### 5.5.3 Calling options

When you press "Option" during an active call, you can select all of these functions:

- ◆ **Hold single call:** to put a call on hold
- ◆ **End single call:** to end a call
- ◆ **New call:** to make a new call during an active call
- ◆ **Phonebook:** shortcut to Phone book menu
- ◆ **Messages:** can enter into Message, read ,write and sent SMS.
- ◆ **Sound recorder:** start to record a conversation
- ◆ **Mute:** to mute the call
- ◆ **DTMF:** can select On or Off.

## 6. Phonebook

You may save the contacts in the phone or SIM card.

Phone book in the main menu choices, menu operation to provide about:

**Quick search:** Enters the phone book record row to arrange the inquiry;

**Search contact:** In the edit interface, input some words, press Option to select search.

**Add new contact:** add new contact to SIM2,to SIM2, to phone

**Copy all:** Copy all record from SIM1to phone, from phone to SIM1,from SIM2 to pone,  
from phone to SIM2, from SIM1 to SIM2, from SIM2 to SIM1.

**Delete:** Delete SIM 1,SIM2 ,phone ,one by one.

**Caller groups:** you can select group in the list of the caller group, view and edit the  
Caller Group Detail.

**Extra Number** to under this menu, you can set the option as follows : SIM1 Owner  
Number, SIM1 Owner Number

**Settings:** can set Memory Status, Preferred Storage, Field

### 6.1 Quick search

to view all of the entries recorded in the phonebook.

### 6.2 Search contac

In the edit interface, input some words, press Option to select search. to search for an  
entry in the phonebook by name.

### 6.3 Add new contact

to add a new record to the phonebook. You have three methods to add new entry:

### 1. Edit directly

- 1) In the idle, input the number, then press Save to select to SIM1 ,to SIM2 or to Phone;
- 2) Fill in the fields you want, and select OK.

### 2. Phonebook—> Add new

See above.

### 3. From call history

From call history select a number ->Option->Save to Phonebook->to SIM1 / to SIM2 / to Phone.

## 6.4 Copy all

You can copy all record from SIM1to phone, from phone to SIM1,from SIM2 to pone, from phone to SIM2, from SIM1 to SIM2, from SIM2 to SIM1.

## 6.5 Delete

to select "**From SIM**" or "**From Phone**" to respectively delete all the entries in the SIM card or mobile phone phonebook.You can select **One By One**\* to delete a telephone number yet.

**Note:** Delete all the entries from SIM card or phone, need input the password, default password is "0000".

## 6.6 Caller groups

Have five groups, friends, family, VIP, business ,other ,you can select group in the list of the caller group, view and edit the Group name, Associate sound, Associate picture, Member list.

## 6.7 Extra numbers

to under this menu, you can set the option as follows: SIM1 owner number, SIM2 owner number,

## 6.8 Settings

to under this menu, you can set the item as follows:

**Memory status:** You can view the total memory capacity and occupied memory space of the phonebooks for both the mobile phone and the SIM card.

**Preferred storage:** You can set a default setting for the storage of telephone numbers to be saved to "SIM" or Phone", and allow the user to choose when adding a new phone entry .

**Fields:** to show or un-show with Home number, Company name, Email address, Office number, Fax number, Birthday, Associate picture, Associate sound, Caller group. If choose "**On**" to show this item, otherwise not show.

## 7. Multimedia

In the idle, select [Menu-> Multimedia], you can set Camera, Image viewer, Video recorder, Video player, Audio player, Sound recorder, FM radio, File manager.

### 7.1. Camera

In the idle, select [Menu-> Multimedia -> Camera], Press Left Soft Key to display the options:

Your phone has a digital video recorder and digital camera. You can record video clips and take pictures

The camera lens is on the back of the handset and the display of the handset works as viewfinder. The camera produces pictures in ".Jpg"

**Note:** if your phone does not have enough memory to take a new photo, you may need to free some memory by deleting old photos or other files in the **File Manager**.

1. Press **Left Soft Key** to choose camera **Options**
2. Press **Right Soft Key** to back to go back to previous menu.
3. Press **OK Key** to taking a photo

#### 7.1.1 Photos

See 7.2 Image Viewer.

#### 7.1.2 Camera settings

You can set EV, AE meter, Banding, Delay timer, Cont shot.

#### 7.1.3 Image settings

You can set Image size and Image quality.

#### 7.1.4 White balance

You can select Auto, Daylight, Tungsten, Fluorescent, Incandescence.

#### 7.1.5 Scene mode

You can select Auto or Night.

#### 7.1.6 Effect setting

You can select Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert. Embossment ,Sketch The default is Normal.

#### 7.1.7 Storage

You can select the storage is phone or Memory card.

#### 7.1.8 Restore default

Reset all of the settings to their default values.

## 7.2 Image viewer

You can view images, select a image, the options display is:

**View:** You can view photo.

**Send:** You can send the photo to MMS.

**Rename:** You can rename the current photo.

**Delete:** You can delete the current photo.

**Delete all files:** You can delete all photos.

**Storage:** You can select the storage.

### 7.3 Video player

In this submenu, you can play, Send, Rename, Delete ,Delete all files ,Storage.

In the video during play.

- ◆ Press the **OK key** play the video or pause it.
- ◆ Press the **Right soft key** stop play.
- ◆ Press the number **Upside key** and **downside key** adjust volume.
- ◆ Select Video Player and press Option to display video list.

**Play:** Play the current video.

**Send: send To MMS .**

**Rename:** You can rename the current video.

**Delete:** Delete the current video.

**Delete all files:** Delete all the videos in the list.

**Storage:** You can select the storage.

### 7.4 Audio player

Your phone includes a audio player for listening to music tracks. You can listen to music files with a compatible headset or using the phone's loudspeaker.You can make or answer a call while using the music player. During a call, the music playback is paused.

**Note:** Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. We recommend you use the stereo headset in order to appreciate the high quality of your music.

Press Left Soft Key enter into list.

Press OK key to play music and pause.

Press upside key and downside key to adjust volume.

Press Up key enter into settings.

Press Down Key to stop.

Press Left Key and Right Key change music.

Select Music to display the Audio player interface. control songs, Click List to enter into the MP3 list interface. In the list interface, click option to display the options: Play, Details, Add to ringtones, Refresh list and Settings.

**Play:** Play the current music.

**Details:** You can view the detail of the music.

**Add to Ringtones:** Set the current music as ring.

**Refresh list:** Refresh music list.

**Settings:** You can set the play mode.

Select **Options** for:

**Note:** All music tracks must be stored in **My Music** (Default setting). You may not change the path.

- ◆ **Pre. play list:** choose play music is in phone or in memory card.
- ◆ **List auto gen:** Select on or off.
- ◆ **Repeat:** repeat play the music is once or all, or off
- ◆ **Shuffle:** play randomly off your playlist
- ◆ **Background play:** Select to allow music to play when you leave music player or other phone functions.
- ◆ **Sound effects:** Select Equalizer or off.

**Note:** this setting is only active while music is playing. When you restart the music player, you will need to reselect this option.